


CEILING MOUNTED PROJECTOR OUTLET

NOTES:

TEACHER STATION OUTLET

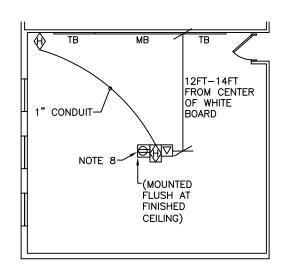

- SMART BOARD PROVISIONS. PROVIDE 1-INCH CONDUIT WITH HDMI CONNECTIVITY TO TEACHER STATION OUTLET.
- 2. LOCATE OUTLET ADJACENT AND ALIGNED WITH TEACHER STATION OUTLET.
- 3. LOCATE OUTLETS ADJACENT TO AND ALIGNED WITH RECEPTACLES.
- 4. COLOR CODE CABLE AND JACKS.
- 5. LABEL FACEPLATE OR TEACHER STATION OUTLET: "TO OVERHEAD PROJECTOR."
- 6. WHERE HDMI AND USB CONNECTIONS CAN BE IN THE SAME GANGED JUNCTION BOX AS THE DATA JACK, DEDICATED HDMI AND USB SINGLE GANG BOXES CAN BE REMOVED.
- 7. INSTALL SMART BOARD INFRASTRUCTURE DEVICES BETWEEN 12FT AND 14FT FOR ROOM SIZES BETWEEN 15FT AND 40FT LONG.
- 8. HDMI/USB OUTLET SHALL BE HUBBELL ISFHD5BK WITH HUBBELL CHARGER RECEPTACLE AVPS152GY.

