



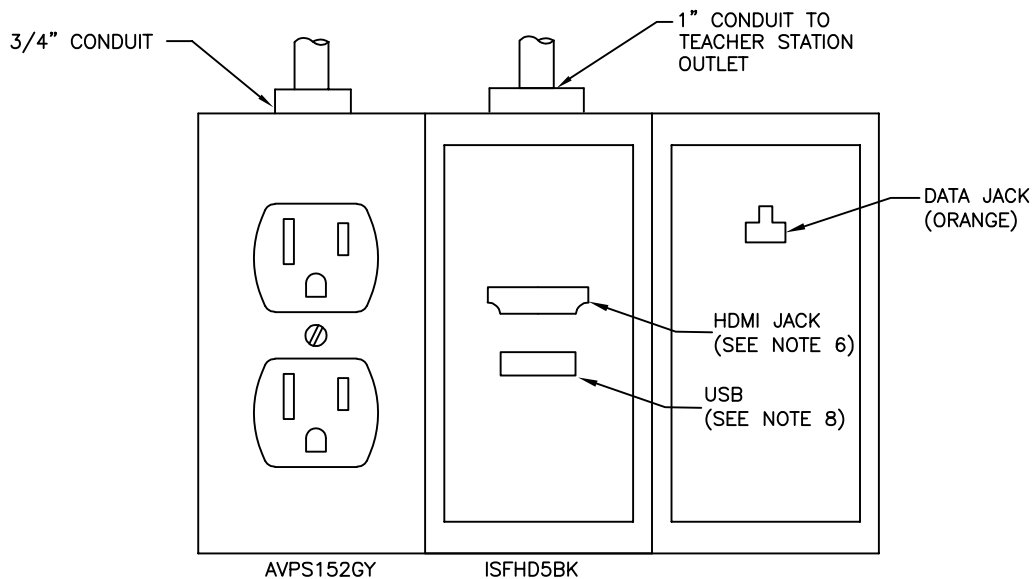


SMARTBOARD / SHORT THROW PROJECTOR OUTLET

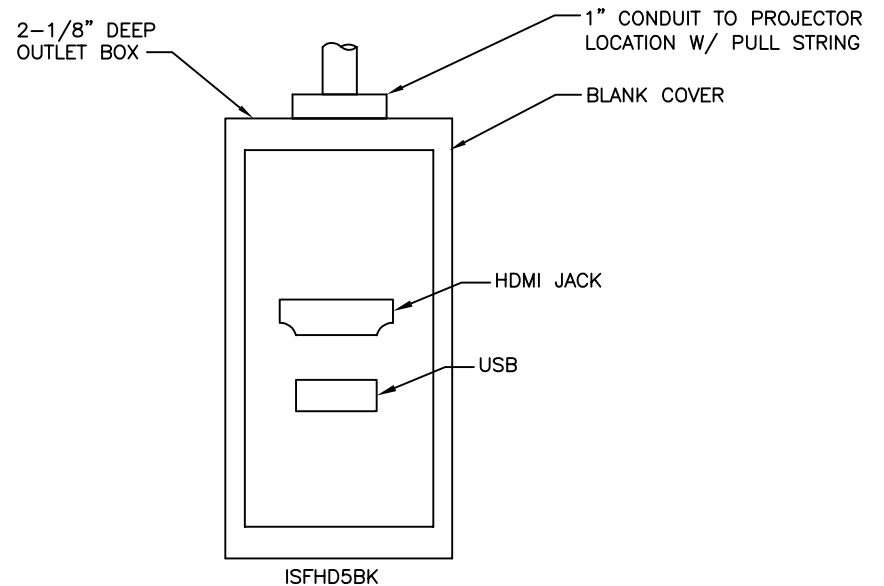

TEACHER STATION OUTLET

NOTES:

1. PROVIDE 1-INCH CONDUIT WITH HDMI CABLE TO TEACHER STATION OUTLET. TERMINATE HDMI CABLE ON FACEPLATE AT EACH END.
2. LOCATE OUTLET ADJACENT AND ALIGNED WITH OR IN TEACHER STATION OUTLET. REFER TO DETAIL ED.806.
3. LOCATE OUTLETS ADJACENT TO AND ALIGNED WITH ISOLATED GROUND RECEPTACLES.
4. SMARTBOARD DEVICES SHALL BE MOUNTED ABOVE WHITEBOARD.
5. COLOR CODE CABLE AND JACKS.
6. LABEL FACEPLATE AT TEACHER STATION OUTLET: "TO SMARTBOARD."
7. WHERE HDMI AND USB CONNECTION CAN BE IN THE SAME GANGED JUNCTION BOX AS THE DATA JACK, DEDICATED HDMI AND USB SINGLE GANG BOXES CAN BE REMOVED.
8. HDMI/USB OUTLET SHALL BE HUBBELL ISFHD5BK WITH 5V POWER SUPPLY (AVPS152GY) OR CPS ITS APPROVED EQUIVALENT.

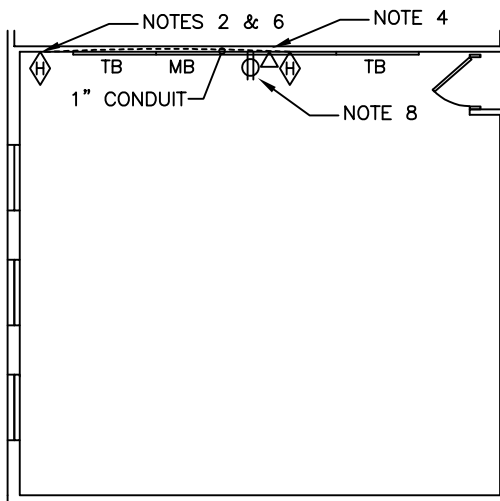

CHICAGO PUBLIC SCHOOLS CAPITAL IMPROVEMENT PROGRAM INFORMATION TECHNOLOGY SERVICES INFRASTRUCTURE STANDARDS			
SMARTBOARD / SHORT THROW PROJECTOR DETAILS – NEW CONSTRUCTION			
PROJECT NUMBER		SCALE NTS	DATE 06/01/24
SHEET NO. ED.011A			

NO.	DATE	REVISION	BY

DESIGNED	CPS
DRAWN	CPS
CHECKED	CPS
APPROVED	CPS